
INSTALL

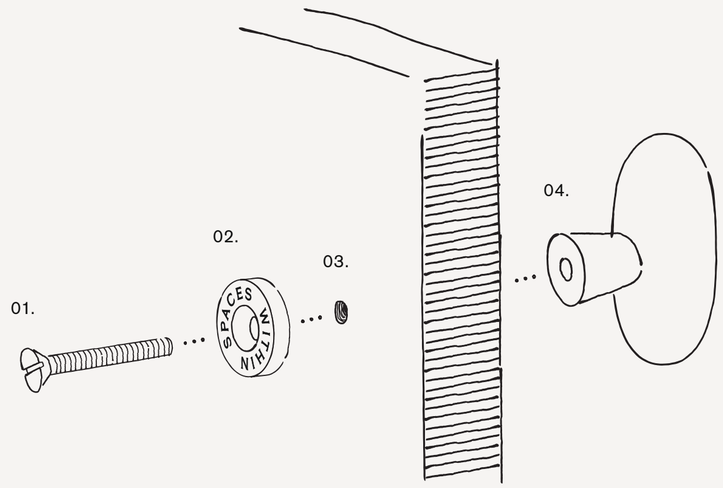

.01 **SCREW**

Select the suitable screw length.
All hardware are delivered with two
M4 screws, lengths 25mm & 30mm.

.02 **WASHER**

Place the washer on the back side.
The washer adds stability, prevents
rotation and protects the cabinetry.

.03 **HOLE**

Pre-drill a 4mm hole.

.04 **HARDWARE**

Place the hardware on the front
side of the cabinetry.

