

INSTALL
LUIS / GAVI


FIXING

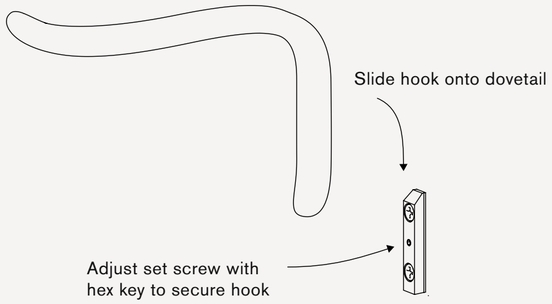

DOVETAIL MOUNT

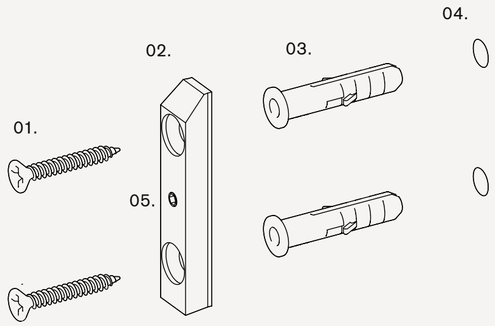

HOLE PLACEMENT

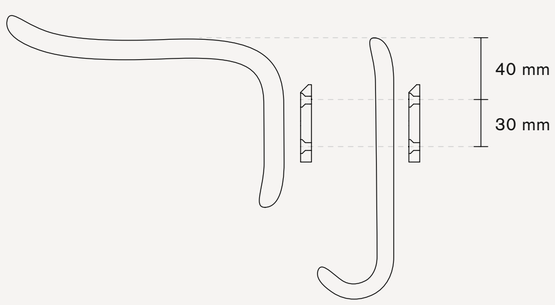

LUIS

.01 2 screws, 4 mm × 30 mm.
.02 Dovetail mount, cc 30 mm, facet upwards.
.03 Wall plugs Ø5 × 25 mm, for plaster, brick, concrete.
.04 Pre-drill hole in wall: 5 mm with plug, 3 mm without plug.
.05 Adjust set screw using 2 mm hex key to secure hook.

GAVI

.01 2 screws, 4 mm × 35 mm.
.02 Dovetail mount, cc 30 mm, facet upwards.
.03 Wall plugs Ø6 × 30 mm, for plaster, brick, concrete.
.04 Pre-drill hole in wall: 6 mm with plug, 3 mm without plug.
.05 Adjust set screw using 2 mm hex key to secure hook.

