
INSTALL
IRIS / NOOR



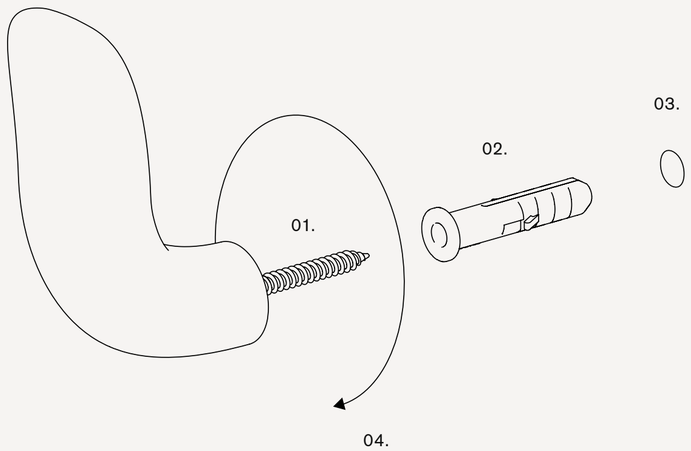

IRIS

.01 Hook with screw attached, 4 mm × 30 mm.
.02 Wall plugs Ø5 × 25 mm, for plaster, brick, concrete.
.03 Pre-drill hole in wall: 5 mm with plug, 3 mm without plug.
.04 Turn hook to position.

NOOR

.01 Hook with screw attached, 4 mm × 35 mm.
.02 Wall plugs Ø6 × 30 mm, for plaster, brick, concrete.
.03 Pre-drill hole in wall: 6 mm with plug, 3 mm without plug.
.04 Turn hook to position.